

Remote Controller



Version date 13-11-2019 www.opple.com

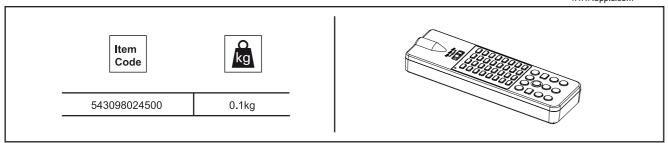

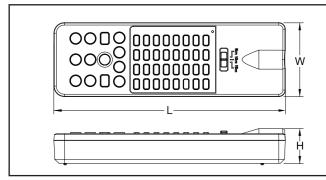


Model	L (mm)	(mm)	H (mm)
LED HB4-Remote Controller	175	56	26.25


Use with two AAA 1.5V batteries.
Batteries are not included in remote controller.

Operation


Note: Before starting ensure that luminaires are turned on, and the remote has batteries.

1 Set the remote sensitivity according to the mounting height of the Highbay

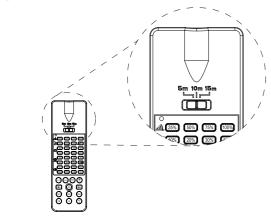


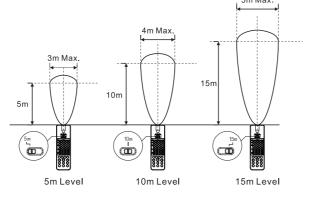

Point the remote facing forward towards the motion sensor of the Highbay MD, all the luminaires with sensor within range will respond to the signal.

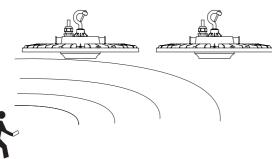

 
3 The luminaire indicator light (green) will flash one time after it has received the new setting.



250052907000


OPPLE

Remote Functions

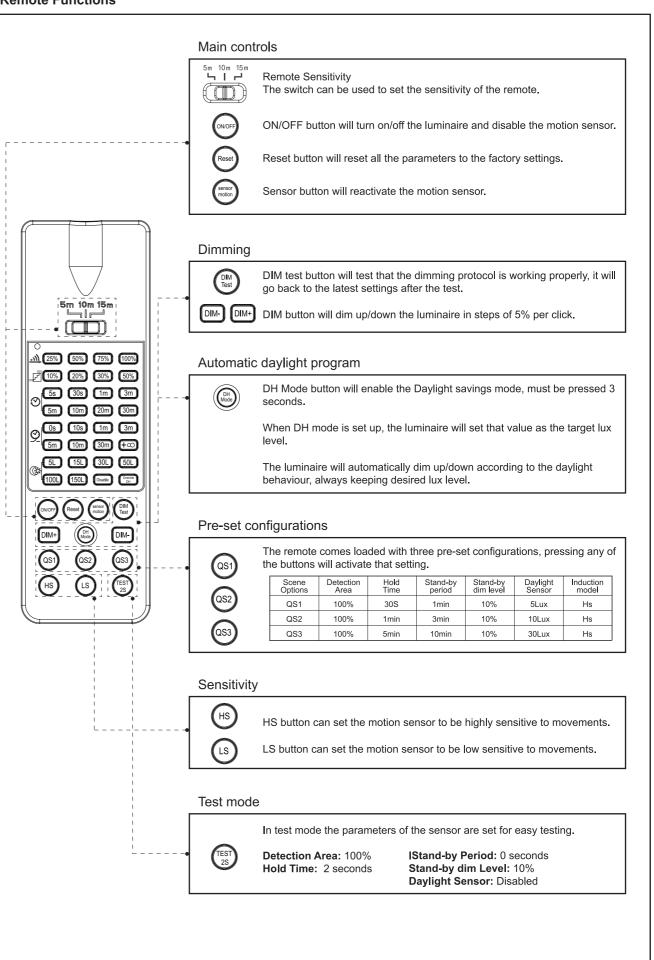



Remote Functions

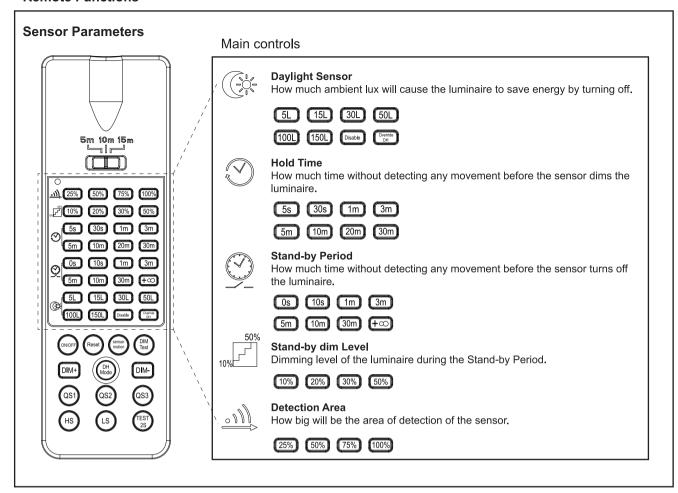



Suzhou Opple Lighting Co.,Ltd. 215200 East Side, Fenyang Road, Fenhu Economic Development Zone,
Wujiang City, Jiangsu Province,
The Netherlands
service@opple.cc P.R.China

OPPLE Lighting B.V. Materiaalweg 6-6A 5681 RJ Best service@opple.com www.opple.com