

# Communication accessories

## Connecting the RS485 link


### USB / RS485 interface

inter\_002\_a\_2\_cat



#### Function

If the PC is not equipped with a serial port, this interface can be connected via a USB port to obtain an RS485 communication port. Recommended for local use and not for permanent installation.

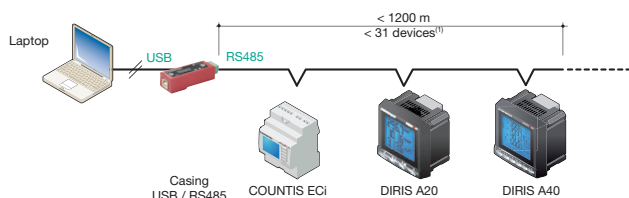


(1) Beyond these characteristics, use an "RS422 / RS485 repeater".

inter\_142\_g\_1\_gb\_cat

#### References

Description of accessories	Reference
External USB / RS485 interface unit	4899 0110

## Other solutions and services

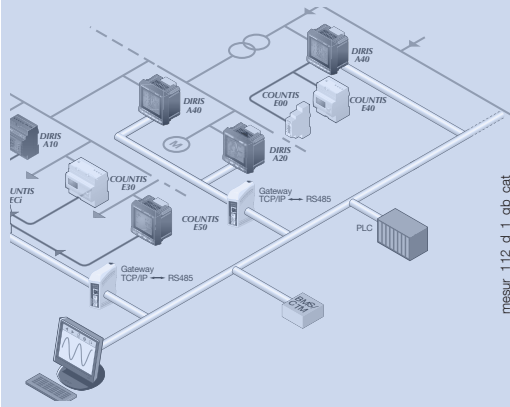

The accessories listed in these pages represent a selection from our range.

We can supply many other solutions upon request, such as SHDSL interfaces, fibre optics/RS485, GSM/GPRS and protocol converter interfaces.

### Need something integrating into your network?

No problem for our Expert Services team. They will fully integrate all your SOCOMEC devices, audit your system, commission selected equipment and train your staff on its use.

For further information, please contact your nearest SOCOMEC branch.