

PRODUCT-DETAILS

2542 DR-914

2542 DR-914 Cover plate with legend Venetian blind Turn button Symbol "arrows" alpine white - Busch-balance SI



General Information

Extended Product Type	2542 DR-914
Product ID	2CKA001753A0231
EAN	4011395190623
Catalog Description	2542 DR-914 Cover plate with legend Venetian blind Turn button Symbol "arrows" alpine white - Busch-balance SI
Long Description	As cover for flush-mounted blind control switch/push switch. For inserts 2712 U, 2713 U and 2722 U, 2723 U.

Installation

Instructions and Manuals	No document needed
--------------------------	--------------------

Technical

Data Sheet, Technical Information	No document needed
Application	Venetian blind
Design Range	Busch-balance SI
Mounting Type	Flush Mounted
Type of Fastening	Clamp
Surface Finishing	Untreated Glossy
Material	Thermoplastic
Legend	Symbol "arrows"

Model Number	Turn button
RAL Number	RAL 9010 - Pure White
Color	alpine white

Environmental

Degree of Protection	IP20
RoHS Status	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
RoHS Information	2CKA200000E2224
REACH Declaration	2CKA309999E9999

Dimensions

Product Net Width	55 mm
Product Net Height	55 mm
Product Net Depth / Length	30.4 mm
Product Net Weight	19 g

Ordering

Minimum Order Quantity	1 piece
Package Level 1 Units	carton 10 piece
Package Level 1 Gross Weight	0.25 kg
Customs Tariff Number	85389099
Country of Origin	Germany (DE)

Certificates and Declarations

Declaration of Conformity - CE	2CKA200000E2224
-----------------------------------	-----------------

Classifications

ETIM 8	EC000011 - Control element/cover plate for domestic switching devices
ETIM 9	EC000011 - Control element/cover plate for domestic switching devices
WEEE Category	Product Not in WEEE Scope
CN8	8538 90 99
eClass	V11.0 : 27144002

Accessories

Identifier	Description	Type	Quantity	Unit Of Measure
2CKA001101A0559	2722 U Blind switch insert Turn button 2-pole push button	2722 U	1	piece
2CKA001101A0542	2713 U Blind switch insert Turn button 1-pole switch and push switch	2713 U	1	piece
2CKA001101A0534	2712 U Blind switch insert Turn button 2-pole switch and push switch	2712 U	1	piece
2CKA001725A1531	2511-91-507 Cover Frame 1gang(s) entrée-grey - Basic55	2511-91-507	1	piece
2CKA001725A1484	2511-92-507 Cover Frame 1gang(s) white - Basic55	2511-92-507	1	piece
2CKA001725A1501	2511-93-507 Cover Frame 1gang(s) champagne - Basic55	2511-93-507	1	piece
2CKA001725A1479	2511-94-507 Cover Frame 1gang(s) alpine white - Basic55	2511-94-507	1	piece

2CKA001725A1506	2511-95-507 Cover Frame 1gang(s) château-black - Basic55	2511-95-507	1	piece
2CKA001725A1511	2511-96-507 Cover Frame 1gang(s) chalet-white - Basic55	2511-96-507	1	piece
2CKA001725A1516	2511-97-507 Cover Frame 1gang(s) foyer-red - Basic55	2511-97-507	1	piece
2CKA001725A1521	2511-98-507 Cover Frame 1gang(s) bistro-blue - Basic55	2511-98-507	1	piece
2CKA001725A1526	2511-99-507 Cover Frame 1gang(s) maison-beige - Basic55	2511-99-507	1	piece
2CKA001725A1532	2512-91-507 Cover Frame 2gang(s) entrée-grey - Basic55	2512-91-507	1	piece
2CKA001725A1485	2512-92-507 Cover Frame 2gang(s) white - Basic55	2512-92-507	1	piece
2CKA001725A1502	2512-93-507 Cover Frame 2gang(s) champagne - Basic55	2512-93-507	1	piece
2CKA001725A1480	2512-94-507 Cover Frame 2gang(s) alpine white - Basic55	2512-94-507	1	piece
2CKA001725A1507	2512-95-507 Cover Frame 2gang(s) château-black - Basic55	2512-95-507	1	piece
2CKA001725A1512	2512-96-507 Cover Frame 2gang(s) chalet-white - Basic55	2512-96-507	1	piece
2CKA001725A1517	2512-97-507 Cover Frame 2gang(s) foyer-red - Basic55	2512-97-507	1	piece
2CKA001725A1522	2512-98-507 Cover Frame 2gang(s) bistro-blue - Basic55	2512-98-507	1	piece
2CKA001725A1527	2512-99-507 Cover Frame 2gang(s) maison-beige - Basic55	2512-99-507	1	piece
2CKA001725A1533	2513-91-507 Cover Frame 3gang(s) entrée-grey - Basic55	2513-91-507	1	piece
2CKA001725A1486	2513-92-507 Cover Frame 3gang(s) white - Basic55	2513-92-507	1	piece
2CKA001725A1503	2513-93-507 Cover Frame 3gang(s) champagne - Basic55	2513-93-507	1	piece
2CKA001725A1481	2513-94-507 Cover Frame 3gang(s) alpine white - Basic55	2513-94-507	1	piece
2CKA001725A1508	2513-95-507 Cover Frame 3gang(s) château-black - Basic55	2513-95-507	1	piece
2CKA001725A1513	2513-96-507 Cover Frame 3gang(s) chalet-white - Basic55	2513-96-507	1	piece
2CKA001725A1518	2513-97-507 Cover Frame 3gang(s) foyer-red - Basic55	2513-97-507	1	piece
2CKA001725A1523	2513-98-507 Cover Frame 3gang(s) bistro-blue - Basic55	2513-98-507	1	piece
2CKA001725A1528	2513-99-507 Cover Frame 3gang(s) maison-beige - Basic55	2513-99-507	1	piece
2CKA001725A1534	2514-91-507 Cover Frame 4gang(s) entrée-grey - Basic55	2514-91-507	1	piece
2CKA001725A1487	2514-92-507 Cover Frame 4gang(s) white - Basic55	2514-92-507	1	piece
2CKA001725A1504	2514-93-507 Cover Frame 4gang(s) champagne - Basic55	2514-93-507	1	piece
2CKA001725A1482	2514-94-507 Cover Frame 4gang(s) alpine white - Basic55	2514-94-507	1	piece
2CKA001725A1509	2514-95-507 Cover Frame 4gang(s) château-black - Basic55	2514-95-507	1	piece
2CKA001725A1514	2514-96-507 Cover Frame 4gang(s) chalet-white - Basic55	2514-96-507	1	piece
2CKA001725A1519	2514-97-507 Cover Frame 4gang(s) foyer-red - Basic55	2514-97-507	1	piece
2CKA001725A1524	2514-98-507 Cover Frame 4gang(s) bistro-blue - Basic55	2514-98-507	1	piece
2CKA001725A1529	2514-99-507 Cover Frame 4gang(s) maison-beige - Basic55	2514-99-507	1	piece
2CKA001725A1535	2515-91-507 Cover Frame 5gang(s) entrée-grey - Basic55	2515-91-507	1	piece
2CKA001725A1488	2515-92-507 Cover Frame 5gang(s) white - Basic55	2515-92-507	1	piece
2CKA001725A1505	2515-93-507 Cover Frame 5gang(s) champagne - Basic55	2515-93-507	1	piece

2CKA001725A1483	2515-94-507 Cover Frame 5gang(s) alpine white - Basic55	2515-94-507	1	piece
2CKA001725A1510	2515-95-507 Cover Frame 5gang(s) château-black - Basic55	2515-95-507	1	piece
2CKA001725A1515	2515-96-507 Cover Frame 5gang(s) chalet-white - Basic55	2515-96-507	1	piece
2CKA001725A1520	2515-97-507 Cover Frame 5gang(s) foyer-red - Basic55	2515-97-507	1	piece
2CKA001725A1525	2515-98-507 Cover Frame 5gang(s) bistro-blue - Basic55	2515-98-507	1	piece
2CKA001725A1530	2515-99-507 Cover Frame 5gang(s) maison-beige - Basic55	2515-99-507	1	piece
2CKA001726A0222	2516-901-507 Decorative Styling Frame attica / pigeon blue - Basic55	2516-901-507	1	piece
2CKA001726A0223	2516-902-507 Decorative Styling Frame silver metallic - Basic55	2516-902-507	1	piece
2CKA001726A0224	2516-903-507 Decorative Styling Frame light green - Basic55	2516-903-507	1	piece
2CKA001726A0225	2516-904-507 Decorative Styling Frame orange - Basic55	2516-904-507	1	piece
2CKA001726A0226	2516-905-507 Decorative Styling Frame yellow - Basic55	2516-905-507	1	piece
2CKA001726A0227	2516-906-507 Decorative Styling Frame apricot - Basic55	2516-906-507	1	piece
2CKA001726A0228	2516-907-507 Decorative Styling Frame luminous - Basic55	2516-907-507	1	piece
2CKA001726A0220	2516-92-507 Decorative Styling Frame white - Basic55	2516-92-507	1	piece
2CKA001726A0230	2516-93-507 Decorative Styling Frame champagne - Basic55	2516-93-507	1	piece
2CKA001726A0218	2516-94-507 Decorative Styling Frame alpine white - Basic55	2516-94-507	1	piece
2CKA001726A0232	2516-95-507 Decorative Styling Frame château-black - Basic55	2516-95-507	1	piece
2CKA001726A0234	2516-96-507 Decorative Styling Frame chalet-white - Basic55	2516-96-507	1	piece

Categories

Low Voltage Products and Systems → Wiring Accessories - Light Switch Ranges → Cover Plates (partly incl. Insert) → Mechanical Controls

