


## KNX ARGUS Presence 180/2.20 m flush-mounted

Operating instructions

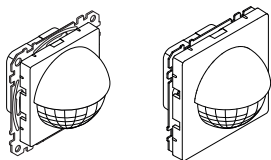

### System M

KNX ARGUS Presence 180/2,20 m flush-mounted  
Art. no. MTN6304..., MTN6306..

### System Design

KNX ARGUS Presence 180/2,20 m flush-mounted  
Art. no. MTN6302-60..

## For your safety



### DANGER

**Risk of serious damage to property and personal injury, e.g. from fire or electric shock, due to incorrect electrical installation.**

Safe electrical installation can only be ensured if the person in question can prove basic knowledge in the following areas:

- Connecting to installation networks
- Connecting several electrical devices
- Laying electric cables
- Connecting and establishing KNX networks

These skills and experience are normally only possessed by skilled professionals who are trained in the field of electrical installation technology. If these minimum requirements are not met or are disregarded in any way, you will be solely liable for any damage to property or personal injury.

## ARGUS introduction

The ARGUS Presence 180/2.20 m flush-mounted (referred to below as **ARGUS**) is a flush-mounted KNX presence detector for indoor installation. It detects moving heat sources, e.g. people, within a radius of 180° and to a distance of approx. 8 m to the right and left and approx. 12 m to the front. The ARGUS is designed for installation at a height of 2.2 m. A mounting height of 1.1 m is also possible, although this will halve the range. With anti-crawl protection, movement directly beneath the device is also detected.



The specified ranges refer to average conditions for the recommended mounting height and are therefore guide values. The range and sensitivity can vary greatly when the temperature fluctuates.

If a movement is detected, a data telegram defined by the programming is transmitted to control, for example, lighting, blind or heating simultaneously. If the lighting is controlled by brightness-dependent movement detection, the device constantly monitors the brightness in the room. If sufficient natural light is available, the device will switch the artificial light off even if a person is present.

The ambient brightness from which the ARGUS will detect movements can be set with the rotary switch for detection brightness. To do this, the ARGUS is equipped with a light sensor whose brightness threshold can be set between 10 and 1000 lux (in the ETS from 10 to 2000 lux). The range and the overshoot time can be set at two further rotary switches.

The ARGUS also has two movement sensors. You can set their sensitivity and range sector-specifically in the ETS.

The ARGUS has an integrated bus coupler and its power is supplied via KNX.

## Using ARGUS with alarm systems




Movement/presence detectors are not suitable for use as components of an alarm system.



Movement/presence detectors can trigger false alarms if the installation site has been chosen unfavourably.

Movement/presence detectors switch on as soon as they detect a moving heat source. This can be a person, but also animals, trees, cars or differences in temperature in windows. In order to avoid false alarms, the chosen installation site should be such that undesired heat sources cannot be detected (see section „Selecting the installation site“).


## Connections, displays and operating elements

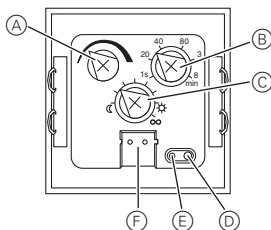


- (A) Setting the range
- (B) Setting the overshoot time
- (C) Setting detection brightness
- (D) Programming button
- (E) Programming LED
- (F) Bus connection

## Selecting the installation site

- Only mount the ARGUS in positions which allow the required area to be monitored optimally.

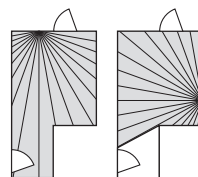

- Observe the area of detection: Install the ARGUS on the wall at a height of approx. 2.20 m above the floor. Any mounting height which deviates from this will affect the range.
- Install the ARGUS laterally with respect to the direction of movement so that the beam paths are intersected as vertically as possible.

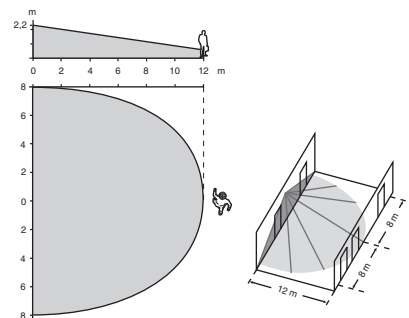


- In order to ensure continuous monitoring, e.g. of a long hall, the areas of detection of the individual movement detectors have to intersect.
- Movement detectors can detect all objects that radiate heat. You should select an installation site that will not result in undesired heat sources being detected, such as:
  - switched-on lights in the area of detection
  - open fires (such as in fireplaces)
  - moving trees, shrubbery, etc. whose temperature differs from that of their surroundings.
  - windows where the influence of alternating sunlight and clouds could cause rapid changes in temperature.
  - larger heat sources (e.g. cars), that are detected through windows.
  - sunlit rooms with reflecting objects (e.g. the floor), which can be the cause of rapid changes in temperature.
  - windowpanes heated up by sunlight
  - insects moving across the lens.
  - dogs, cats, etc.
- To prevent faulty operation, the ARGUS should be installed in a wind-resistant switch box. With switch boxes and pipe cabling systems, a draught of air at the back of the equipment can trigger the ARGUS.
- Avoid direct sunlight. This can destroy the sensor in extreme cases.


## ARGUS installation

A frame is required for installation.

- 1 Connect the bus wires to the bus connecting terminal.
- 2 Fit the retaining ring onto the installation box.

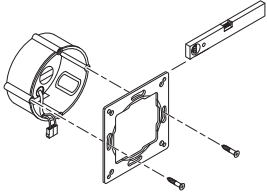

- 3 Insert the ARGUS in the frame.

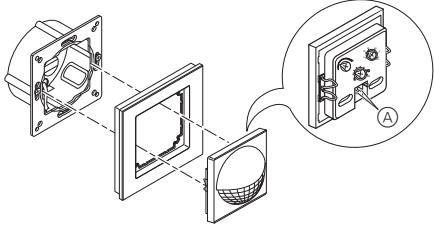

- 4 Plug the bus terminal onto bus connection (A) of the ARGUS.
- 5 Insert the ARGUS with the frame into the retaining ring and click into place.

## Putting ARGUS into operation

- 1 Press the programming button.

The programming LED lights up.

- 2 Load the physical address and application into the device from the ETS.

The programming LED goes out.


The application has been loaded successfully, the device is ready for operation.

## Setting ARGUS

You can set the range, detection brightness and overshoot time on the rear of the ARGUS. These settings can also be made in the ETS.

### Setting the range


Here you can infinitely set the distance up to which ARGUS detects movements (up to max. 12 m).

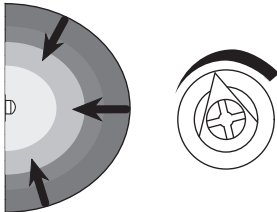

### Setting the detection brightness

Here you can infinitely set the ambient brightness level at which the ARGUS detects movements and triggers a switching procedure.

- Moon symbol (left stop) The ARGUS will only detect movements during the hours of darkness (approx. 10 lux).
- Sun symbol: The ARGUS detects movements up to approx. 1000 lux.
- Infinity symbol (right-hand stop): The ARGUS detects movements regardless of the ambient brightness.




### Setting the overshoot time

With the overshoot time you specify how long the connected load will remain switched on after the last movement has been detected. Depending on the ETS application, the overshoot time is either set in the ETS program (any time between 1 second and 255 hours) or directly on the ARGUS (six steps from approx. 1 second to approx. 8 minutes).


### Setting the movement sensors

The ARGUS has two movement sensors "A" and "B". You can set their sensitivity and range sector-specifically in the ETS.

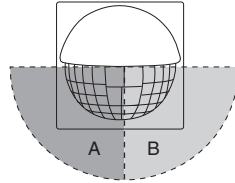

## Blocking out areas

If sources of interference (such as light sources) inadvertently switch on the connected luminaires, you can block these areas out. Adjust the area of detection of the ARGUS by applying, moving or shortening the covering segments supplied.

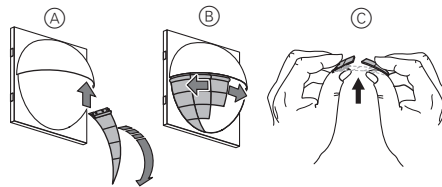

- 1 Place the covering segment on the centre of the lens and click it into place at the top between the hood and the lens (A).
- 2 Move the covering segments precisely onto the area which you wish to block from detection (B).
- 3 If necessary: Shorten the covering segments at the positions marked so only the close range of the lens is used (C).



Using covering segments affects the detection brightness of the ARGUS. Re-adjust the detection brightness.

## Technical data

Nominal voltage:	DC 24 V (+6 V / -4 V)
KNX connection:	bus connecting terminal
Angle of detection:	180°
Number of levels:	6
Number of zones:	46
Number of movement sensors:	2, adjustable acc. to sector (ETS)
Recommended mounting height:	2.20 m
Range:	approx. 8 m right/left, approx. 12 m to the front; infinite setting (rotary switch or ETS)
Detection brightness:	infinite setting from approx. 10 lux to approx. 1000 lux (rotary switch) or from 10 lux to 2000 lux (ETS)
Overtravel time:	adjustable in 6 steps from approx. 1 s to approx. 8 min (rotary switch) or from 1 s to 255 hours (ETS)
Display elements:	1 red programming LED
Operating elements:	1 programming button, rotary switch for detection brightness, range, and overtravel time
Ambient temperature	
Operation:	-5 °C to +45 °C
Storage:	-25 °C to +55 °C
Transport:	-25 °C to +70 °C
Initialisation:	due to the limitation of the telegram rate, a telegram cannot be generated until 20 seconds after initialisation at the earliest.
IP protection rating:	IP 20



Dispose of the device separately from household waste at an official collection point. Professional recycling protects people and the environment against potential negative effects.

## Schneider Electric Industries SAS

If you have technical questions, please contact the Customer Care Centre in your country.

[schneider-electric.com/contact](http://schneider-electric.com/contact)