

# Intellia Conventional Zone-Module EMI-310/CZ

Instruction Sheet R10130GB0



# Schneider Electric Fire & Security Oy

Sokerilinnantie 11 C FI-02600 Espoo, Finland Tel: +358 10 446 511

Website: www.schneider-electric.com Document number: R10130GB0

Published: 13.05.2019

© 2018 – Schneider Electric. All Rights Reserved. This information is only to be used as guidance. Subject to changes and errors.

2 R10130GB0



# **Contents**

1 Intell		llia Conventional Zone-Module EMI-310/CZ4
	1.1	Schematic Diagram & Wiring Connections5

R10130GB0 3



### 1 Intellia Conventional Zone-Module EMI-310/CZ

Fire protection systems can be engineered simply and effectively without the need for custom-designed equipment.

The loop powered EMI-310/CZ Conventional Zone-Module with Isolator powers and controls the operation of a zone of conventional detectors.

The Intellia series of products are all compatible with the ALC-board of Esmi Sense FDP and FX-panel.

The maximum number of conventional detectors in the zone is 20.

A 5,1  $k\Omega$  end-of-line resistor is fitted to the last detector on a conventional line for openand short-circuit faults.


The EMI-310/CZ module is fitted with a bi-directional short circuit isolator and will be unaffected by loop short circuits on either the loop input or loop output.

Two LEDs, one red and one yellow, are visible through the front cover of the enclosure. The red LED is illuminated to indicate that a fire alarm condition has been detected on the zone wiring. The yellow LED is illuminated whenever the built-in isolator has sensed a short circuit loop fault.

4 R10130GB0



## 1.1 Schematic Diagram & Wiring Connections

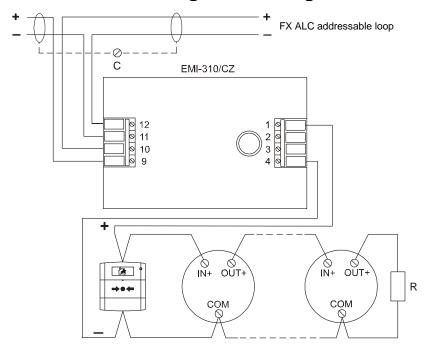

- 1 = Zone output +
- 2 = Zone output +
- 3 = Zone output -
- 4 = Zone output -
- 9 = L2 (+ve)
- 10 = L2 (+ve)
- 11 = L1 (-ve)
- 12 = L1 (-ve)
- C = Additional connector for shield
- R = End-of-line resistor  $5.1 \text{ k}\Omega \pm 5 \% 1/3 \text{ W}$

### Note!

Alarm conditions are latched internally by the EMI-310/CZ. It is therefore necessary to reset the alarm even if non-latching conventional detectors are used.

**Note!** All Intellia series I/O modules take 1 address from the loop, regardless how many inputs/outputs they have.

R10130GB0 5